

---

# Content

□、Basic Knowledge .....	1
1.1 Brief .....	1
1.2 Safety Notice .....	2
1.3 Use Your Phone Properly .....	2
1.4 About the Battery .....	4
1.5 About the Charger .....	7
1.6 About SIM Card .....	7
1.7 Security Codes .....	8
□、Introduction to Your Watch Mobile .....	8
1> Appearance .....	9
2> Two Basic Keys .....	9
3> Icons .....	10
4> Input Method Switch .....	10
5> Answer phone .....	13
III Phone Call .....	13
1> Call History .....	13
1.1> Missed Call .....	13

---

1.2> Dialed Call.....	14
1.3> Received Calls.....	14
1.4> Delete Recent Calls.....	14
1.5> Call Time .....	15
1.6> Call Cost .....	15
2> Common Phone Call .....	15
IV Message .....	16
1> Write Message .....	16
2> Inbox .....	17
3> Drafts .....	17
4> Outbox .....	18
5> MMS .....	18
5.1> Write Message .....	18
5.2> Inbox .....	19
5.3> Outbox .....	19
5.4> Draft .....	20
5.5> Template .....	20
5.6> MMS Settings .....	20

---

6> Broadcast Message	21
7> Template	21
8> SMS settings	21
V Call Setting	22
1> SIM1 or SIM2 Call Setting	22
1.1 Caller ID	22
1.2 Call Waiting	22
1.3 Call Divert	23
1.4 Call Barring	23
1.5 Line Switching	23
1.6 Closed User Group	23
2> Advanced Settings	24
2.1 Black List	24
2.2 Auto Redials	24
2.3 IP Dial	24
2.4 Call Time Display	24
2.5 Call Time Reminder	25
2.6 Auto Quick End	25

---

2.7 Reject by SMS	25
VI、 Menu	25
1> phone book	25
1.1> Name Search	27
1.2> Add Number	28
2> Settings	28
2.1> Dual SIM Setting	28
2.2> Pen Calibration	29
2.3> Phone Setup	39
2.3.1 Time and Date	39
2.3.2 Schedule Power On/Off	39
2.3.3 Language	39
2.3.4 Display	39
2.3.5 Greeting Text	30
2.3.6 Handwriting	30
2.3.7 UART Settings	30
2.3.8 Misc. Settings	30
2.4> Network Setup	30

---

2.5> Security Setup .....	30
2.5.1 SIM Lock .....	31
2.5.2 Phone Lock .....	31
2.5.3 Fixed Dial .....	32
2.5.4 Barred Dial .....	32
2.5.5 Change Password .....	32
2.6> Restore Factory Settings .....	32
3> Multimedia .....	33
3.1> Camera .....	33
3.2> Image Viewer .....	33
3.3> Video Recorder .....	34
3.4> Video Player .....	34
3.5> Audio Player .....	35
3.6> Sound Recorder .....	36
3.7> FM Radio .....	36
3.8> File Manager .....	36
4> Network Services .....	37
4.1> Functions Provided by Network .....	37

---

4.2> Internet Service .....	37
4.2.1 Homepage .....	37
4.2.2 Bookmark .....	37
4.2.3 Recent Pages .....	37
4.2.4 Offline Pages .....	38
4.2.5 Input Address .....	38
4.2.6 Service Inbox .....	38
4.2.7 Setting .....	38
4.3> Video Chat .....	38
4.3.1> Register ID .....	39
4.3.2> How to Chat .....	39
4.3.3> Index .....	40
5> General Informations .....	41
6> Organizer .....	42
6.1> User Profiles .....	42
6.1.1 General .....	42
6.1.2 Meeting Mode .....	43
6.1.3 Outdoor Mode .....	43

---

6.1.4 Indoor Mode	43
6.1.5 Headset Mode	43
6.1.6 Bluetooth Mode	44
6.2>Calendar	44
6.3> Tasks	44
6.4> Alarm	45
6.5>Connectivity	45
6.5.1 Bluetooth	45
6.5.2 Data Account	46
□II、Addenda	47
1 Simple Fault Eliminate	47
2 Fittings Instruction	49

---

# User Guide

## I、Basic Knowledge of the Dual SIM Card Dual Standby

### Watch Phone

#### 1.1 Brief

To keep your mobile phone in good condition, please read this manual carefully before you use it.

This mobile is perfect in design and delicate in craftsmanship, having flown line figure, perfect combination of convenient hand writing function with analog qwerty keyboard, colorful touch screen, dulcet ring tones, cartoon incoming call icons, huge file management function, fashionable camera and video function, long time voice record function, MP3/MP4 players, supporting SMS , MMS and WAP.

Most of all, it is a dual SIM card dual standby watch phone supporting



---

one key video recording function. We are sure our watch phone will bring convenience and fun to your work and daily life.

## **1.2 Safety Notice**

□ If your phone is lost or theft, please inform network operator to ban this phone and SIM card. (This function needs the support of network), which can avoid economic loss caused by imitating calls.

□ To avoid misuse of your phone, please take safety measure, such as Setting SIM card and PIN code.

Setting phone PUK code

## **1.3 Use Your Phone Properly**

Please do not use your phone when you are driving, If have to dial, please use hand free accessories. And don't put your phone above the air sac or within the range of the opening air sac, it may cause harm to you.

Before you go aboard the plane, please turn off your phone or set it under flight mode. If you have set alarms and auto turn on function, please cancel such settings.

---

Mobile phone may cause interference to other electronic devices. Please put your phone away from electronic devices such as TV set, radio set, computer, cardiac pacemaker, hearing aids, and other medical equipments, etc. Please do not put your phone near credit card or magnetic field.

Power off the phone when you are in dangerous area such as gas station, oil digging plant, chemical plant or bunker.

Abide by relevant laws, rules, and regulations. The watch phone has several functions, such as picture taking, video recording, MP3, MP4 and sound recording, which may violate right of privacy or other rights if used improperly. The manufacturer will not responsible for such a violation.

Talk quality may be interfered by radio wave. Please keep a suitable distance from TV sets, radio set, or other radio receivers when you make or answer phone calls.

Please tack care of your phone, do not shake, and knock on it. Sheath may rub off the coating of your phone. Solute such as benzene, diluent,

---

and alcohol may causticize the phone. Only use soft cloth to clean it lightly. Please do not expose it to sunshine, and keep it from smog, moisture, dust and water. Please do not touch the antenna and only use the fittings and battery approved by suppliers. Please pull the head instead of the cable when you want to disconnect the charger from the phone. Please don't use your phone under extremely high or low temperature condition.

Temperature above 55°C or below -10°C will shorten the life-span and affect the performance of the phone .

The mobile phone watch must be installed and repaired by professionals. Unauthorized installing and repairing may cause danger.

Emergency phone calls are free of charge in many countries, please check with network operators to get the emergency numbers. Please make sure your phone is power on and within the coverage of network when you need an emergency phone call. Please do not resort to your phone as the only means of communication when you need help.

Please keep your phone at a place beyond reach of your children.

 
 

---

## 1.4 About the Battery

(1) Please make sure your phone was power off when you take the battery out, or data in the phone may lose, and shorten the life-span of the phone

(2) You need to charge the battery completely before you use it. It's better to charge the battery as long as 14 hours at first three times, and about 8 hours afterwards, so the battery can work in best condition. Please do not charge the battery consecutively more than 24 hours, because over charging may shorten the life-span of the battery.

(3) Please charge only with the charger provided by the supplier and at a cool and ventilative place when you charge the battery. The battery would give out heat and smoke, burn and disfigure, or even explode if charging under high temperature.

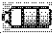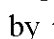(4) Your watch mobile can  inspect and show battery status, you could see battery volume icon  by pressing  . When the battery volume is too low, the screen will show "electricity low" to remind for charge. We suggest you charge the battery after power run off

---

completely, at least one time every month, thus can make your battery keeping in best working condition.

(5) Using USB charger function:

One end of USB connected to computer, and another to USB interface of the watch mobile. When charging, the battery icon will show the changing status until the battery is full.

(6) Using travel charger :

Battery can be charged by travel charger, connect charger adapter with USB cable to the mobile and plug it in correct power socket., the battery icon will show the changing status until the battery is full. And stop changing when complete charging.

(7) Please do not disassemble, extrude and shake the battery, or make it a short circuit , or use a defective battery. The battery and the LCD screen may be destroyed and cause harm to people near the phone.

(8) The battery can be recharged several hundred times. The standby time and talk hours will be shorter and shorter after a long period. When the standby time is very short, please change a new battery.

---

(9) Please do not expose the battery to sunshine, fire, smog and dust, or put it in a bad circumstance, such as wet, too hot or too cold. Please do not dip the battery into water or other liquid.

(10) Please keep the battery at a place beyond reach of your children.

(11) Please dispose the waste battery properly to protect the environment.

Notice: the battery's functions ( such as standby time and talk time) is different when working due to operation fashion and network system

### **1.5 About the Charger**

(1) Please do not disassemble or refit the charger. Prohibit to use a charge with broken wire.

(2) Please do not connect the charger with wet hands. Please cut off the electricity when water or other liquid immersed into the charger

(3) Please do not shake the charger, or make it a short circuit, or expose it to sunshine, or use it under wet condition or near TV set, radio set, etc.

(4) Please disconnect the charger by holding it steadily of pulling the wire.

---

(5) Please keep the charger at a place beyond reach of children.

### **1.6 About SIM Card**

The SIM card is provided by network operator. Personal information and PIN code, telephone directory, SMS, MMS and other system service information will be stored in the SIM card.

Please take care of your SIM card, don't twist or press hard on it, and avoid to touch the chip circuit. Don't put the SIM card with magnetic things. If the SIM was spoiled, many functions may not available again.

Please make sure that the phone was power off when you take the SIM card out. Prohibit to insert or take out the SIM card when the phone was connected to the charger or computer. The SIM card would be burned if you insist to do so.

 
### **1.7 Security Codes**

Security codes refer to PIN code, PUK code, and phone password. Please view details about how to set your security codes with reference to “security setup”

---

## II. Introduction to Your Watch Mobile

### 1> Appearance

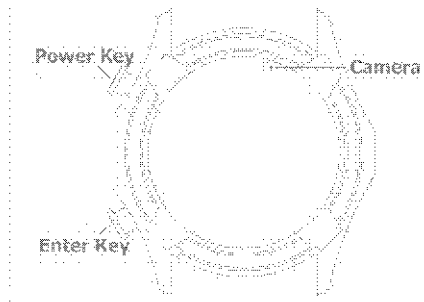

### 2> Two Basic Keys

**Power key** (upper left ) :Hold on 5 seconds to turn on/off. Push one second to back to the standby status from every level of operation (including refusig or ending phone calls)



---

**Enter key** (lower-left): perform the words at lower left corner of the screen; push one second to visit call history under standby status; or to select sim card with which you want to make voice call after you input phone number. Hold on 5 seconds to record video and then push the key 1 second to save the video.

### **3> Icons**

There are indicative icons always at bottom area, such as OK, Back, Option, etc.

**Ok:** function as Enter key

**Back:** back to upper grade catalogue

**Option:** to select

### **4> Input Method Switch**

This mobile supports multilanguage input method between 12 languages, numbers, and symbols, and could be used in editing phonebook, message, memo, file management, greetings and other file editing.

### **(1) Input Method Basic Knowledge**

---

After enter into editing windows (include editing phonebook, message, and memo), the icons are following:

**Option**: you can switch language by selecting “Input method”, insert phone numbers, names and bookmarks by selecting “Advanced”, and other operations.

**Clear**: to delete words

**Select**: to select right word from many candidates if you input by handwriting in English.

Icon at the upper left corner is indicating language such as **ABC** is for English, **AR** for Arabic, **123** for numbers.

Icon in the middle of the bottom line: to input phone number or select phone number from phone book when finished editing of text, or to select sim card from which the SMS is sent.

 
## **(2) Handwriting Input**

Handwriting input is a powerful tool which will facilitate your job when you write in Chinese character or English alphabet.

To make hand writing more accurate, you need to setup handwriting

---

speed. Please follow this sequence to setup the speed: Menu

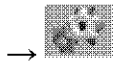

→ Phone settings → Handwriting.

Under Chinese, English or number input mode, you can write characters or alphabets directly on the screen, choose right word from many candidates when the icon is **Select** instead of **Option**.

### (3) English Input

Choose **abc** or **ABC** and press the icon ↑ to display a qwerty keyboard, and use touch pen to input English alphabet. To switch Capital status by clicking **↑ A**.

To display qwerty keyboard by pressing ↑, and hide it by pressing ↓.

### (4) Number Input

Choose **123** and press the icon ↑ to display number keys and ↓ to hide it.

---

## (5) Other Languages Input

Choose a proper language by pressing **Option**, then select **Input Method** to find it, It support 12 languages both in capital and non-capital.

Or choose language by pressing the upper left icon, it can change language one by one. To display qwerty keyboard by pressing ↑, and hide it by pressing ↓.

### 5> Answer phone

Press “Enter key” to answer.


Press “Power key” to stop a call.

Press “Power key” or **Reject** to refuse a call.

Press **Option** to “Pause, stop, new call, phone book, message, voice record, mute/restore, double music multi frequency and so on.

## III Phone Call

---

Click the screen if the phone is under standby status, then touch  icon to select phone call stypes. You can check phone call history and make phone call with.

## 1> **Call History**

You can check missed, dialed, and received calls, and delete call records of each sim card.

### 1.1> **Missed Call**

You can check as many as 20 records of the most recent missed incoming phone calls.

Touch searching icon in the middle of the bottom line to view detailed information, and press Enter Key or **Option** for further processing such as deleting, saving, dialing, editing, or sending messages.

### 1.2> **Dialed Call**

You can check as many as 20 records of the most recent dialed phone calls.

Touch searching icon to view detailed information, and press Enter

---

Key or **Option** for further processing such as deleting, saving, dialing, editing, or sending messages.

### **1.3> Received Calls**

You can check as many as 20 records of the most recent received phone calls.

Touch searching icon to view detailed information, and press Enter Key or **Option** for further processing such as deleting, saving, dialing, editing, or sending messages.

### **1.4> Delete Recent Calls**

You can empty records of missed calls, dialed calls and received calls respectively, or delete all.

### **1.5> Call Timer**

With this function, you can check the accumulated time of calls out, in, and the last call. You can reset the timer.

Last call time: check the last talk time.

Total sent: accumulated time of the dialed calls

Total received: accumulated time of the received calls

---

Reset all time: reset all timers to zero.

## 1.6> Call Cost

With this function, you can know last call cost, total cost, max cost, price per unit and can reset cost.

## 2> Voice Phone Call

By selecting “ComPH”, you can make a common voice telephone call to another mobile phone.

Don't mention too much about how to make voice phone calls. You input phone number at keyboard, press **Dial** icon to dial out, or **Save** to add it to the telephone directory, or **Clear** to delete a wrong digit, or **Abort** to cancel phone call.

You can also make voice phone calls by checking phone number first in the telephone directory or in call history.

## IV Message

This phone allows you to view, reply, write, send, receive, edit, delete,

---

copy, move, and forward messages, and use phone number or web URL of messages.

### **1>Write Message:**

**Step one:** write down the short message content.

Click "option", you can choose the following options:

Send to: to input phone numbers to which the message will be sent.

Input method: Switch the input method (language).

Insert Template: there are 10 short sentences for you choice, you can insert one each time and edit based on those sentences.

Advanced: you can insert object such as pictures, animations, melodies and ring tones, and numbers, names, bookmarks. You can also set text format such size, style, alignment, new paragraph

Save to Drafts: save the message to drafts for future usage.




**Step 2:** Select phone numbers by clicking the icon in the middle of the bottom line or “send”, and press the icon in the middle of the bottom line or “send” again to send out the message, or you can edit or remove recipient, or save to drafts:



---

## **2> Inbox**

Messages you received

When receive new messages , the icon  or  will appear when you check status by click , and if the inbox has full, you can not receive the new message , pls delete the unnecessary messages.

## **3> Drafts**

Drafts are messages not finished but saved, if the draft was sent out, it was deleted from this box automatically.

## **4>Outbox**

Messages you sent out if you choose “Save and Send” when you send them.

## **5> MMS**

Your phone could send and receive MMS (Multimedia Message).Through MMS, you can send pictures, sound and text contained in the news. When sending MMS information, the phone of

---

the recipient must also has MMS function.

### **5.1> Write Message**

a. Choose “write message”, then input information.

To: recipient’s phone number or email address.

Cc: phone number or email address of another recipient

Bcc: phone number or email address of a confidential recipient.

Subject: setting MMS subject

Edit content: edit MMS content, user can add word, pictures, voice and attachment.

b. When input the information, click “Done” to enter next step.

Send only: send MMS without saving copy in outbox

Save and send: store in outbox and send.

Save to drafts: Store MMS in drafts folder

Save as template: Store the MMS as template for future usage.




Send options: setup the MMS sending options, including validity period, delivery report, read report and priority

Exit: exit the MMS editing and ask you whether save the MMS or not.

---

## 5.2> Inbox

Messages you received

When receive new messages , the icon  or  will appear when you check status by click , and if the inbox has full, you can not receive the new message , pls delete the unnecessary messages.

## 5.3> Outbox

Messages you sent out if you choose “Save and Send” when you send them.

## 5.4> Draft

Messages saved as drafts. If the draft was sent out, it was deleted from this folder automatically.

## 5.5> Template

You can add 5 MMS in this folder as templates. You can view, send and check properties of the MMS template:

View: to view content of the selected template.

---

Write Message: to use the template as a new MMS content, you only need to modify the head of the MMS such as recipient's phone number.

Properties: to check properties of the selected template.

### **5.6> MMS Settings**

Compose: setting MMS mode, image size, and automatic signature.

Send: setting the validity period, delivery report, read report, priority, slide timing and delivery time.

Retrieve : Setting home network, roaming, read report, and delivery report.

Filter: setting whether reject anonymous MMS and advertisement or not.

Server profile: setting MMS servers.

Memory status: see the MMS storage status.

### **6>Broadcast Message**

The service allows you to receive the text of a variety of information,

---

such as weather conditions or traffic information. This need be supported by the network operator.

### **7> Template**

There are 10 short sentences stored in the phone, you can use, edit or delete the sentence.

### **8>SMS settings**

**Profile Setting:** to setup a short message center number, you can get the number automatically from the SIM card or you need to obtain it from the network operator.

**Common Setting:** to setup the information of delivery report and reply path

**Memory Status:** to see percentage of memory volume messages occupied.

**Preferred:** Set Short Message Outbox default storage location, select the SIM card or mobile phone

### **V Call settings**

---

## **1> SIM1 or SIM2 Call Settings**

### **1.1 Caller ID**

Network operators can choose the system default to hide or deliver numbers. Yourself can also decide whether send ID or not.

### **1.2 Call Waiting**

Activate: If you activate this function, a request will be sent to the network operator. The network will inform you other incoming phone calls when you are during phone call conversation.

Deactivate: Call waiting function disabled. Network will not notice you when someone call you during your conversation,

Query Status: If you don't know this function is enabled or not, you can inquire about this with the network.

### **1.3 Call Divert**

With this function, you can divert all incoming phone calls or selectively to another phone, or to voice mail, or you can disable any kind of divert functions.

To activate divert function, you need to input a phone number to

---

receive the diverted phone calls.

A request will be sent to the network operator when you setup any of such functions.

### **1.4 Call Barring**

You can bar outgoing calls or incoming calls according to your need. Any operation of this function is requested to offer a password.

### **1.5 Line Switching**

Can switch line between line 1 and line 2, line 1 is acquiescent.

If choose line 2, whether can dial is subjected to network operator.

### **1.6 Closed User Group**

This function need be supported by the network operator. A function enables individuals within the group more convenient to contact with each other.

## **2.2> Advanced settings**

### **2.1 Black list**

You can set as most as five phone numbers. Phone calls and messages from those numbers will be barred to get access to you.

---

## **2.2 Auto Redial**

You can choose to enable or disable this function. If enabled, the phone will dial the outgoing phone call again when it can not reach the callee at the first time.

## **2.3 IP Dial**

You can set 3 IP numbers, each time you can activate one IP number for a SIM card.

## **2.4 Call Time Display**

You can choose to enable or disable this function. If enabled, the phone will show how long the phone call is during conversation.

## **2.5 Call Time Reminder**

This function is aimed at saving the charges. You can disable this function, or set a reminding time or reminding period.


## **2.6 Auto quick end**

 
## **2.7 Reject by SMS**

**VI**  **Menu**



---

click  enter a menu window with 6 icons. Press a highlighted icon will enter the relevant submenu.

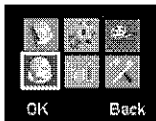

1>  **phone book**

The storage capacity of telephone numbers depends on SIM cards. Numbers stored in the cell phone and SIM card can be used as a unified telephone directory. Each record could perform the following operations by pressing **Option** or by clicking the name.

View: to check phone number under this name.

Send SMS: to send short message

Send MMS: to send multimedia message

Call: to make voice phone call.

IP dial: to make voice phone call by adding IP number before the

---

phone number.

Edit: edit this telephone number.

Delete: to delete this record from phone book.

Copy: You can copy a phone number from mobile phone to SIM card, and vice versa;

Move: You can move a phone number from mobile phone to SIM card, and vice versa;

Send contact: to send another phone number to this phone number.

Add to Blacklist: to add this phone number to blacklist by this means you will never bother by phone calls and messages from this phone number.

Mark Several: You can mark several numbers to send SMS or delete at a time.

Caller Groups: You can divide the phone book into as many as 5 groups. You can set ring tone, caller picture, caller video for each group.


Phonebook Settings: You can set preferred storage, speed dial, owner's number, vCard version and extra numbers; you can check

---

memory status, copy, move or delete contacts.

Print: you can print contacts if printer and computer are available.

### **1.1> Name Search**

When you click  to enter into the phone book, it display only the first contact number by name alphabet sequence. So you can search another contact by input the first 5 alphabets of the name and click the searching icon. For example, if you want to search for Sky Fan's phone number and it is truly in the phone book, then you input "sky" (or as many as 5 alphabets) in the search bar and click the searching icon, the contact name and number will be found out. Then you can edit, send SMS or MMS, or make a phone call to that number.

### **1.2> Add Number**

You can add new contact information after you input phone number to call, or add number from call history.

Choose the number and click **Option**, select **Add New Entry** and

---

decide to phone or SIM card, Edit name and number, select **Done** to finish the name edition, and **OK** to finish number, and **Yes** to save or **No** to cancel.

## 2> Settings

### 2.1> Dual SIM Setting

It is a multiple choice of one from four. To activate one option means to inactivate other three. You can set the phone under two SIM open mode, or any of them, or non for different situation.

Under a flight mode, the phone works as SIM card tanken out, so phone calls and messages are not available, butt other functions which do not need newwork support are available.

### 2.2> Pen Calibration

To adjust the accuracy of touch screen

### 2.3> Phone Setup

#### 2.3.1 Time and Date

---

2.3.1.1 Set time zone: There are 77 main cities which can be representative of each time zone.

2.3.1.2 Set Time /Date: Set time, date and daylight saving.

2.3.1.3 Set Format: Set the format of time and date.

2.3.1.4 Update with time zone

### **2.3.2 Schedule Power On/Off**

You can setup four different times for automatical power on and off,

### **2.3.3 Language**

To select language for the watch phone operating system.

### **2.3.4 Display**

To setup wallpaper, screen saver, pow on / off display, and determine whether to show time and date.

### **2.3.5 Greeting Text**

To edit a short text to show off when the phone powers on.

### **2.3.6 Handwriting**

Setting handwritten speed and handwritten color.

### **2.3.7 UART settings**

---

You can set sim1 or sim2 as UART.

### **2.3.8 Misc. settings**

Setting LCD backlight time and brightness.

### **2.4>Network Setup**

With this function, you can set up the network automatically or manually when your mobile is under roaming status. But you could only choose the network which has roaming agreement with the networks your SIM card belongs to.

### **2.5> Security Setup**

The function is associated with the safety of the mobile phone.

#### **2.5.1 SIM Lock**

Please use this function with caution.

It requires a PIN code to activate this function. The PIN code will be required every time you turn on the watch phone if you activated this function. Three consecutive errors in putting in the PIN code will lead to a requirement of PUK code to unlock your SIM card. If the PUK code is incorrect or lost, please resort to the network operator. Please

---

do not try the PUK code if it is not correct. Ten consecutive errors in putting PUK code well lead to a forever lock. The initial PIN code and PUK code are provided by the network operator.

### **2.5.2 Phone Lock**

Please use this function with caution.

It requires a password to activate this function. The initial password provide by the factory is “1234”. You can change this password. But it was required every time you turn on the watch phone if you activate this function. If you forget this password, you will never turn you watch phone on.

### **2.5.3 Fixed Dial**

This function need be supported by network operator and need to provide PIN2 code to finish the setup. When the Fixed Dial function is enabled, only the fixed number can be dial out. How many numbers can be fixed depending on the network operator. Generally, PIN2 code is not available for a individual.

### **2.5.4 Barred Dial**

---

This function need be supported by network operator and need to provide PIN2 code to finish the setup. When this function is enabled, the barred number can not be dial out.

### **2.5.5 Change Password**

You can change PIN code, PIN2 code and phone lock password.

### **2.6> Restore Factory Settings**

Please input password as required, click “OK” for restoring. The initial password is “1234”.



## **3> Multimedia**

### **3.1> Camera**

When you click this function, it will enter in a picture taking mode automatically.

You can use tools at the upper area to change parameters. And click the camera icon at the middle of the lower area to get the picture.

You can also make other processing by clicking icon at the lower left,



---

many functions are equal to the tools at the upper area when you take pictures.

Or you can go back to the upper category by clicking icon at the lower right.

### **3.2> Image Viewer**

You can view, rename and delete pictures in JPEG, and GIF format, and use them as wallpaper, screen saver, power on display, phonebook image. Whether it can display or not depending on the size of the picture. Please refer to the pictures you taked by using the watch phone camera to know the suitable size (pixel of the picture).

### **3.3> Video Recorder**

When you select this function, it will enter in a camcorder status. You can adjust parameters by clicking icon at the lower left.

Press icon at the middle of the lower area to to start, pause and continue, or click icon at the lower right to save or quit. The video can be found and played with video player.

The phone can be used as a spy camcorder. Under standby status, you

---

hold on the Enter key 5 seconds to start video recording, the screen will be enter into a black status with a toot to suggest the beginning. If you want to save the record, you can press the Enter key again with 1 second, the screen will display the recording status. You can click icon at the lower right to save or quit. If you use this function, please save the recording with no body around you.

### **3.4> Video player**

The acquiescent folder to store video is under the phone storage, so the first time you use the player need to change storage from the phone to the memory card. And Videos are stored in “video” folder. If you rename the folder’s name, videos may not be found by the player. You can play, forward, rename, delete and sort videos in 3GP, AVI and MP4 format.

You can tune the voice volume, capture pictures and extend the window to full screen when you play a video.

The video player supports stereo bluetooth, earphone and loudspeaker.

### **3.5> Audio Player**

---

The acquiescent folder to store music is under the phone storage, so the first time you use the player need to change storage from the phone to the memory card. And musics are stored in “My Music” folder. If you rename the folder’s name, Musics may not be found by the player.

You can play, view detail information, add to ring tones, refresh list, set play sequence of musics in MP3, WAV, AMR and MIDI format.

You can tune the voice volume, pause, and resume when you listen to it.

The audio player supports stereo bluetooth, earphone and loudspeaker.

### **3.6> Sound Recorder**

The first time you use this function, you need to select the storage for files and setting format and quality of the records. Press **Option** and choose “new record” to start. You can pause and continue during recording, press stop to finish. You will find the records and play them with the recorder.

It supports records in AMR or WAV format.

### **3.7>FM Radio**

---

1. You need insert the earphone first so that the radio can be ready. You can click the arrows to tune the frequency and the plus or reduce icon to tune voice volume

2. You can click **Option** to set more parameters.

### **3.8> File Manager**

You can check memory status and process files by clicking **Option**.

Note: Please do not delete or rename the acquiescent folders, especially folders of the phone.



### **4> Network Services**

#### **4.1> Special functions provided by the network operator.**

You get different SIM card, you get different functions.

#### **4.2> Internet Service**

You can surf on the WAP internet to get information.

**4.2.1 Homepage:** the first page you visited can be stored as a homepage. You can also set a homepage by yourself.

---

**4.2.2 Bookmark:** you can store a web page as a bookmark in the mobile phone. You can process the bookmark in following ways.

Got: Visit the website chosen as a bookmark.

Edit: edit chosen bookmark.

Delete: delete chosen bookmark.

Delete all: delete all bookmarks

Add bookmark: to add a new bookmark.

**4.2.3 Recent Pages:** the phone can keep the links of website you visit recently.

**4.2.4 Offline Pages:** Pages you saved will be visit offline.

**4.2.5 Input Address:** to visit page by inputing website address.

**4.2.6 Service Inbox:** Service you obtained from the network operator.

### **4.2.7 Setting**

4.2.7.1 Select SIM: You can select from which SIM card you get WAP services.

4.2.7.2 Profile: edit profiles supported by the network operator.

4.2.7.3 Browser Options: Set browser and the waiting time

---

4.2.7.4 Service Message: you can enable or disable push, and set trust, SL and manage trust list

4.2.7.5 Clear Cache: You can clear cache to save memory space.

4.2.7.6 Clear Cookies: You can also clear cookies left when you visit webpage.

4.2.7.7 Trusted Certificates: information about all trusted certificates

### **4.3> Video chat**

By selecting “ViPH”, you can chat with friends whose mobile phone also supports KK video chat function. Both of you can see each other when you are chatting. KK provides many chances for you to meet new friends. The video chat recently only has Chinese and English version.

The chat is charged by GPRS. Please ask your network operator for correct Access Point Name (APN), different APN will generate different GPRS charges.

#### **4.3.1> Register ID**

The first time you use this video chat function, you need to register a

---

ID. Please select “Register” and click **Ok** ,The system will send a require automatically, you will receive several short messages in your SMS inbox. At the same time, you will get a KK ID and password. Data Account keeps several APNs for your choice, but it is limited by the network operator who provides the SIM card to you, and only suitable APN has access to login. If you still can not login in after you get the ID and password, please check your Data Account if it is correct.

### **4.3.2> How to Chat**

After you entered into chat room or selected user, click **OK** to start chat, click **input** to write message, and click **Ok** to send out. How to input please refer to the previous chapter. Click **Menu** to select other operation.

### **4.3.3> Index**

#### **4.3.3.1 Chat room**

Chat room supports several people chat together.

#### **4.3.3.2> Find user**

---

you can find users according to your needs, now this chat function mainly used by Chinese people. if you want to add an friend by searching the ID, please select “advanced search”

#### 4.3.3.3> List my friend

Friends you added in may be found in this list.

#### 4.3.3.4> Recent contact

Recent contacts may be found here.


#### 4.3.3.5> Help

Listing a hotline phone number and FAQ for you.


### 5> **General Informations**


Following icons can tell you how your phone has been set

 /  GPRS function on











 /  Unread SMS or MMS

 /  Internet Signal

 Earphone is plugged in

 Lock key is open



- 
-  Lock key is close
  -  bluetooth function is on
  -  Alarm is on
  -  common mode is on
  -  vibration and ring activated
  -  ring after vibration activated
  -  vibration only activated
  -  /  Missed call
  -  Battery volume

## 6> Tools

### 6.1> User Profiles

To setup different mode for different using conditions, such as general, meeting, outdoor, indoor, headset and bluetooth. You can setup ring tome, volume, alert, etc for each mode.

#### 6.1.1 General

6.1.1.1 Activate: to activate chosen mode at the same time you

---

inactivated other modes

#### 6.1.1.2 Customize

6.1.1.2.1 Tone Setup: setup tones for incoming call, power on, power off, incoming message, and keypad. You can choose acquiescent ring tones, or self defined ones.

6.1.1.2.2 Volume: setup sound volume for ring tone and key tone.

6.1.1.2.3 Alert Type: to setup alert type for incoming calls and messages, you can choose one from four: Ring /Vibration Only/ Vibra and Ring / Vibra Then Ring

6.1.1.2.4 Ring Type : you can choose one from three

Single: only ring once

Repeat: ring repeatedly

Ascending: the ring volume is louder and louder

6.1.1.2.5 Extra Tone: to select extra tones for special condition such as warning, error, camp on, and connect.

#### 6.1.1.2.6 Answer Mode

Any key on is choose random key to answer phone call, and off is

---

Enter key only.

### **6.1.2 Meeting Mode**

Please refer to “General mode”.

### **6.1.3 Outdoor Mode**

Please refer to “General mode”.

### **6.1.4 Indoor Mode**

Please refer to “General mode”.

### **6.1.5 Headset Mode**

Insert earphone into watch phone will activate this mode; please refer to “general mode” to customize. The different is you can choose answer mode as automatical to answer incoming phone calls.

### **6.1.6 Bluetooth Mode**

Successful connection of bluetooth with watch phone will activate this mode. Please refer to “General mode”.

## **6.2> Calendar**

You can view the calendar of current month and others by click red arrows.

---

You can add, edit and delete tasks when you click on a specific date. Edition here will be reflected in **Tasks** and vice versa.


You can view them with weekly or monthly pattern.



### **6.3> Tasks**

You can view tasks as a long list by moving the bar at right side or clicking the arrows above or below the bar.

You can add, edit and delete tasks. The edition is as the same as in calender

### **6.4> Alarm**

You can set as many as five alarm clocks.  You can set time, repeat

mode, audio  options and alert type for each alarm. If you already set an alarm, the icon  can be seen on screen when you clicked .

The repeat mode you can choose once, every day, specific day and days.


---

You can choose music or FM radio in audio options.

## **6.5> Connectivity**

### **6.5.1 Bluetooth**

#### **6.5.1.1 Power**

You can switch on or off the bluetooth function by press “Power” or  icon at the lower left corner.

#### **6.5.1.2 Inquiry Audio Device**

You click “Inquiry Audio Device” to search bluetooth, but you need switch on the bluetooth function first and the bluetooth must also in searching mode ( please refer to the “Bluetooth Headset User’s Guide” to know how to use your bluetooth). If the phone fine the bluetooth, you can click Bond to connect the phone with the bluetooth. A passcode of “0000” (four zeros) is required. Then click YES to finish.

#### **6.5.1.3 Remote Control**

When the bluetooth has been connected to the phone, you can control the phone partly by the bluetooth.

#### **6.5.1.4 My Device**

---

My device is that all equipment which has been connected to this mobile phone.

#### **6.5.1.5 Active Devices**

Active Device is the device currently connected to the phone

#### **6.5.1.6 Settings**

To set detailed parameters of the bluetooth function.

#### **6.5.1.7 About**

detailed information about the handfree sets suitable for the phone.

#### **6.5.2> Data Account**

Data about GSM and GPRS operators

### **VII. Addenda**

#### **1 : Simple fault eliminate**

If the watch mobile found abnormal, please restore to original settings, and read the following method, if the problem can not resolved, please contact seller or aftersales service man.

FAQ	Reason	Solve method
Can not connect to internet	No service or you have no application for this service	Inquire to the network supplier for using
	Wrong setting	Refer to browse introduction
React slowly when touch screen	Touch screen have no proper adjustment	Adjust screen
SIM card problem	SIM card damage	Contact with network supplier
	SIM card fixed improperly	Check SIM card
	SIM card has feculence	Wipe SIM card with clean cloth
Signal weak	Signal weak area, such as high building or basement, the signal is weak	Please go to signal good areas
Signal weak	The line will be crammed at high density calling period.	Avoid using mobile at high density calling period.
Power on failure	No electricity	Charge battery

Small squares in SMS or elsewhere	Characters unrecognized by system.	Advise the sender use language recognizable by the system.
Can not have a call	Start dial forbidden function	Cancel forbidden dial setting
Can not connect to network	SIM card inefficient	Contact with network supplier
	Out of GSM service area	Transfer to network service area
	Weak signal	Transfer to strong signal area
Can not charge	Voltage and charge disagree	Use voltage conformity with charger
	Charger nonstandard	Use charger special for this watch mobile
	Touch badness	Check plugs

## 2 : Fittings Instruction

Speaker fittings : Fittings include earphone and microphone for speaker.



---

USB data wire : When the watch mobile is power off, you can use USB data wire to connect with watch mobile to windows system PC and save files.

When the watch mobile is power on, you can use USB data wire to connect watch mobile and PC, and can start up charging function. If it is Power off, USB data wire can be used as U disk.